





B.Remove the screws.




C.Push to open the leather button.

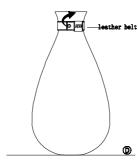


D.Undo the leather belt.

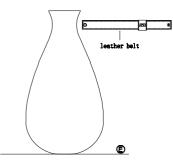


E. Take out the leather belt.

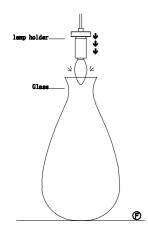

F.Put the lamp holder into the glass.

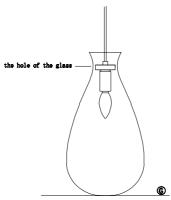


G.Check the hole of the glass \pm 1.Fasten the glass and the aluminium part by screw. (Do not fasten the screw too tight, otherwise the glass will break.)

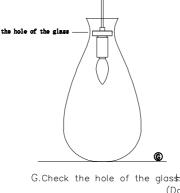


0

I.Put on the leather belt.

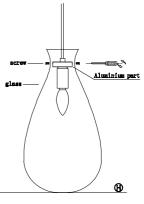


J.Buttoned up the leather belt. and push the leather button to cover the button.

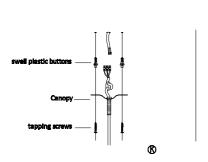

 $\ensuremath{K}.$ Install the swell plastic buttons into the ceiling. Use the tapping screws to fix the bracket into the ceiling.



 $oldsymbol{\perp}$. Connect the power wire to the terminal block.

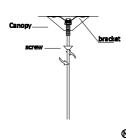

N. Flx the canopy to the bracket by screws.